

<b>PEMBERTON TOWNSHIP FIRE DEPARTMENT GENERAL ORDER</b>
<b>Number: 15-005</b>
<b>Cross Reference: SOP/SOG Vehicle Operations Number: 3.1.1 to 3.2.6</b>
<b>Subject: Generator Operations</b>
<b>Effective Date: Immediately</b>
<b>By Order of: Pemberton Township Fire Chief, <i>Craig L. Augustoni</i></b>

When operating all on-board generators all circuit breakers shall be in the off position prior to engaging the generator. At no time shall the generators be started under a load. All circuit breakers on the engines, and aerials will placed in the off position prior to running the generator. Once the generator is on, you can than turn on the circuit breakers that are needed i.e...light towers, aerial lights, and cord reels. Driver/Operators operating apparatus with the PTO generator should engage the PTO prior to engaging the fire pump when possible to avoid any damage to the generator, for example when responding to evening calls prior to dusk.

